 
 


Program Your Remote Control

Comm1
The Local

This remote control is already pre-programmed to control your Set Top Box (STB). The instructions below will program this remote to control your TV.

1. Manually turn ON the TV that you want to set-up on the remote.
2. Press and Hold  until the TV key blinks twice.
3. Press and release the TV key. The TV key will stay lit.
4. Find your TV and brand from the chart below and note the DIGIT key assigned to your brand. Press and hold down the DIGIT key for your device/brand while pointing the remote to the device.
5. Let go of the key when your device turns OFF. Set-up for that device is complete.

To program this remote control to your other devices  see the instructions below the table on the back of this card.



641.762.3772 | 1.800.469.3772

www.comm1net.net

DIGIT	BRAND
1	Insignia
2	LG
3	Panasonic
4	Philips/Magnavox
5	Samsung
6	Sanyo
7	Sharp
8	Sony
9	Vizio
0	Westinghouse


 
 
 
 
 

DIGIT	BRAND
1	Insignia
2	LG
3	Panasonic
4	Philips, Magnavox
5	RCA
6	Samsung
7	Sharp
8	Sony
9	Toshiba
0	VIZIO

DIGIT	BRAND
1	Bose
2	Denon
3	LG
4	Onkyo
5	Panasonic
6	Philips
7	Pioneer
8	Samsung
9	Sony
0	Yamaha

If your model of device is not on this list, please call for a list of additional device codes.

Unlocking the default setting to make AUD, DVD, and VCR buttons programmable.

The AUD, DVD and VCR mode keys have a default setting which means they are automatically set to the STB. If you would like to program these mode keys to your devices, please follow the instructions below to lock the default setting.

1. Press and Hold  until the mode key blinks twice.
2. Type   
3. Then press the mode key    you desire to program twice.
4. This will remove the STB mode and a new Audio, DVD or VCT code can now be programmed.
5. Follow steps 1 through 5 on the first page of this brochure replacing the work "TV" with the name of the mode key you just unlocked.

Master Power Feature

<<SET-UP>>-> <9>-> <9>-> <5>-> <POWER>-> [STB, TV, AUD etc...]-> <<SET-UP>>

To playback, press the Power key while in STB mode.

Clear Master Power Macro

<<SET-UP>>-> <9>-> <9>-> <5>-> <POWER>-> <<SET-UP>>

Standard Legends:

<< >> = depress and hold for a minimum of 3 seconds with the LED off. Note: When successful, the LED will blink 2 times after <<SETUP>>. Also, the LED will blink 2 times after any three digit programming sequence is entered correctly.

<> = press and release key